

LG Magic Remote Quick Guide



This remote acts as a pointer to the TV and will control the Red pointer dot on the TV Screen to highlight apps and functions. Alternatively, using the control arrows and OK/Scroll wheel will also allow you to navigate. The pointer is somewhat annoying and takes some practice to get used to.

- **Home / App List:** Lists apps available on this TV, such as Netflix, Amazon Prime Video, Apple TV+, Disney, etc.
- **Navigation arrows:** Use the directional arrows (up, down, left, right) to navigate menus
- **Scroll Wheel/OK:** Press center wheel for OK to select, or roll the wheel to scroll.
- **Input Options:** Use to switch inputs from TV apps to DVD/VHS player, Wii game console or HDMI 1
- **Quick Buttons:** Use to quickly access Netflix or Amazon Prime Video - please do not Exit or Log Out of these two apps, just switch apps, input settings or turn off the TV.